To open the filter chamber



Turn over the Airpura



Remove the 4 retaining screws



Take off the cover



Position the Prefilter inside the filter chamber



Place a felt gasket at the bottom of the filter chamber



Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)



Roll it into a spiral



Remove

the gasket

Insert the tube into the filter chamber inside the Prefilter



Let the spiral open to fill the opening



Open the top of the spiral to make a slight funnel



Insert the Carbon canister into the funnel and hold it straight



Let the canister slide down thefilter slider



Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity



Remove the filter slider and fold it for further use





Slide in the Hepa filter

OPERATING FILTER REPLACEMENT DIRECTIONS

To close the filter chamber



Replace the gasket



Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back on casters

TO BEGIN USING YOUR

AIRPURA

Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted, please follow the instructions from the distributor returns policy.

Wipe the unit with a damp cloth to remove any dust from packaging

Plug the unit into a regular grounded 110 volt outlet

Turn on the unit to MAX and allow it to run for at least 30 minutes

Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week.

Always maintain a humidity level of 40% or less in your home to ensure the unit is operating at optimal levels. Overly humid conditions can have an adverse effect on the performance of the carbon. When using purifier with a dehumidifier, please keep dehumidifier at least 6 feet away.



FILTER MAINTENANCE AND REPLACEMENT

The Prefilter


Can be vacuumed from the exterior of the unit once a month or more often. Should be replaced at least after 12 months of use

To vacuum the Prefilter

Use the brush attachment on your vacuum cleaner Vacuum slowly around the mesh surface of the filter chamber

IMPORTANT SAFETY NOTE

Please ensure air purifier is turned OFF when plugging into a power source. Failure to do so may result in motor potentially stalling and/or burning.

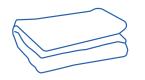

Poly Prefilter 600 2-pack 12 months



Hi-C Carbon Weave 4-6 months

H614: HFPA 14 Filter (99.99 % efficient @ 0.3 Microns)

HEPA 600RVHU Filter

3 to 5 years

(99.97 % efficient @ 0.3 Microns)

Technical specifications

Particle removal

40 sq ft true HEPA (Measured 1 side only) 7-12 pleats per inch Pleats warm rolled with separators

Odor and chemical suppression

306 in² HI-C Carbon weave

Air Flow 560 cfm

More cfm than any other home unit available

Prefilter

570 in² x 1 in

Housing

Powder coat steel

Size

23 in x 15 in

Weight

49 lbs total

Watts

120 on high / 40 on low

Sound Level at 6 feet

34.2 db on low 57.2 db on high (Room Level 25.1)









Air purifiers models and filter configurations

	Prefilter	Particule	Carbon
Alternates	Cotton Prefilter TarBarrier Prefilter		
Upgrade		HEPA 14 Filter (99.99% efficient @ 0.3 Microns) ULPA Filter (99.9999% efficient @ 0.1 Microns)	18 lbs Impregnated carbon (100% Blend) 18 lbs Coconut Shell Carbon Filter (100% Blend) 18 lbs Impregnated Carbon Filter 17% KI/Potassium Iodide, 83% Coconut Shell Carbon)